


Body Label Installation Instructions

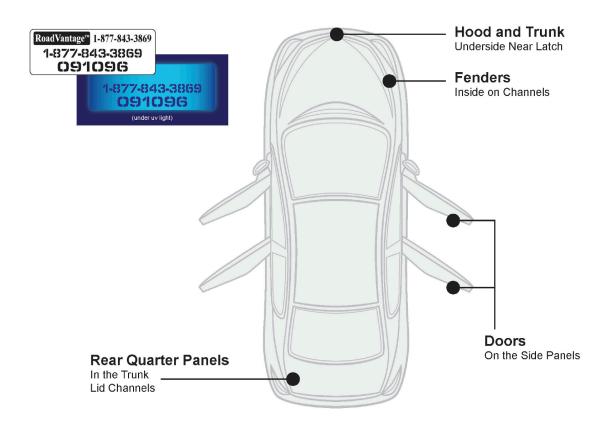

- Identify the locations to be marked with RoadVantage. Labels should not be visible unless the doors, hood, and trunk are open. Doors (2/4), Hood (1), Fenders (2), Quarter Panels (2), Trunk Lid (1).
- RoadVantage is to be applied to a painted metal surface, so ensure the
 area is clean, grease, oil and wax free. If area needs cleaning, it is recommended that isopropyl alcohol be used as a cleaning agent.
- Gently peel the label from the backing FROM TOP CORNER OF LABEL.
 Before applying the label, position it over the location to be sure alignment is correct, (once installed it may not be removed). Apply the label to the area that is to be marked. Gently press the label to remove any wrinkles or air bubbles, then press firmly to completely affix label to the painted surface.
- Repeat these steps for each label to be affixed.